

**Subject:** PowerPalm Lubrication

**Models:** PowerPalm Model Number 02-Palm001

**Summary:** This Technical Bulletin is to discuss the importance of lubricating the PowerPalm to keep it working at peak performance.

### Action:

Lack of lubrication may result with the following symptoms: Nailer running slow or not at all.

Frequent, but not excessive lubrication is required for best performance. To lubricate properly place two to three drops of pneumatic oil into the male air inlet fitting attached to the nailer. The frequency of oiling will depend on usage, a recommended guide line is; after one hour of continuous use, or if the nailer sounds like it is slowing down as it drives the nail.

Note: After adding a few drops of pneumatic oil thru the air fitting, if the PowerPalm is still not cycling properly; remove the red cap, clean the inside components coating them lightly with the same oil. Re-assemble and test. This would be the same procedure for replacing the o-rings.

**Powernail part number: 09-445-29757A Air Tool Oil 6oz.**

