

Subject: Pneumatic Floor Nailer Lubrication

Models: 445 (Black), 445FS (Yellow), 50PFlex (Red)

Summary: This Technical Bulletin is to discuss the importance of lubricating pneumatic floor nailers to keep them working at peak performance.

Action:

Lack of lubrication may result with the following symptoms: Nailer sluggish or cycling slowly, shorter life of internal parts & seals.

Air compressors are not always maintained the way they should be by draining, so they can build up moisture & rust which finds it's way into pneumatic tools. Regular oiling is essential in keeping Powernail floor nailers working properly.

To lubricate, place three to four drops of pneumatic oil into the male air inlet fitting attached to the nailer. This should be done after every 8 hours of use or every time the tool comes back from a rental. To distribute the oil thru the tool, make sure there are no nails/staples in the channel, connect an air line and fire the nailer/stapler 3-4 times.

Powernail part number: 09-445-29757A Air Tool Oil 6oz.



1. Disconnect air supply & remove Nails or staples from the channel,



2. Apply 3-4 drops of pneumatic air-tool oil after every 8 hours of use.



3. Reattach air supply. Dry-fire the nailer/stapler (without nails or staples) 3-4 times to distribute the oil throughout the tool.