

POWERNAIL MODEL 50F SCHEMATIC

ITEM	DESCRIPTION	PART #
1	UM.HD.BOLT	09-50F001
2	FLAT WASHER	09-50F002
3	EXHAUST COVER, METAL	09-50F003
4	SEAL	09-50F004
5	HEX.SOC.HD.BOLT+SW	09-50F005
6	CAP	09-50F006
7	SPACER	09-50F007
8	PISTON STOPPER**	09-50F008
9	SPRING**	09-50F009
10	O RING**	-
11	PISTON HEAD VALVE	09-50F011
12	O RING**	-
13	SEAL	09-50F013
14	O RING**	-
15	PISTON/DRIVE BLADE	-
15A	DRIVE BLADE ASSEMBLY W/ (#14 O-RING)	09-50F015A
16	CYLINDER	09-50F016
17	O RING**	-
18	O RING**	-
19	COLLAR	09-50F019
20	O RING	-
21	BUMPER	09-50F021
22	CYLINDER CAP SEAL	09-50F022
23	STEPPED PIN	09-50F023
24	BODY	-
25	JOINT GUIDE	09-50F025
26	O RING**	09-50F026
27	STEPPED PIN	09-50F027
28	TOR. SPRING	09-50F028
29	TRIGGER	09-50F029
30	E RING	09-50F030
31	O RING**	09-50F031
32	END CAP	09-50F032
33	AIR PLUG	09-50F033
34	TRIGGER VALVE ASSEMBLY^	09-50F034
35	SPRING	09-50F035
36	BUMP FIRE TRIGGER	09-50F036
37	PUSHER GUIDE	09-50F037
38	SPRING	09-50F038
39	PUSHER	09-50F039
40	FLAT HD SELF SCREW	09-50F040
41A	PUSHER ASSEMBLY	09-50F041A

ITEM	DESCRIPTION	PART #
42	HEX.SOC.HD.BOLT	09-50F042
43	NOSE COVER / GATE PLATE	09-50F043
44	HEX.SOC.HD.BOLT	09-50F044
45	FLAT. HD.BOLT	09-50F045
46	NOSE / GATE	09-50F046
47	MAGAZINE	09-50F047
48	FLEX FOOT LOCK NUT	09-50F048
49	MAGAZINE REAR COVER	09-50F049
50	HEX. SOC. HD. BOLT	09-50F050
51	BRACKET	09-50F051
52	FLEX FOOT BASE	09-50F052
53	NO-MAR PAD	09-50F053
54	FLAT WASHER	09-50F054
55	FLEX FOOT ADJUSTMENT LEVER	09-50F055

